

ITEM #0747609




THOROUGHbred CEILING FAN

Harbor Breeze® is a registered trademark of LF, LLC. All Rights Reserved.

MODEL #TEX52MBK5C1L

Español p. 22

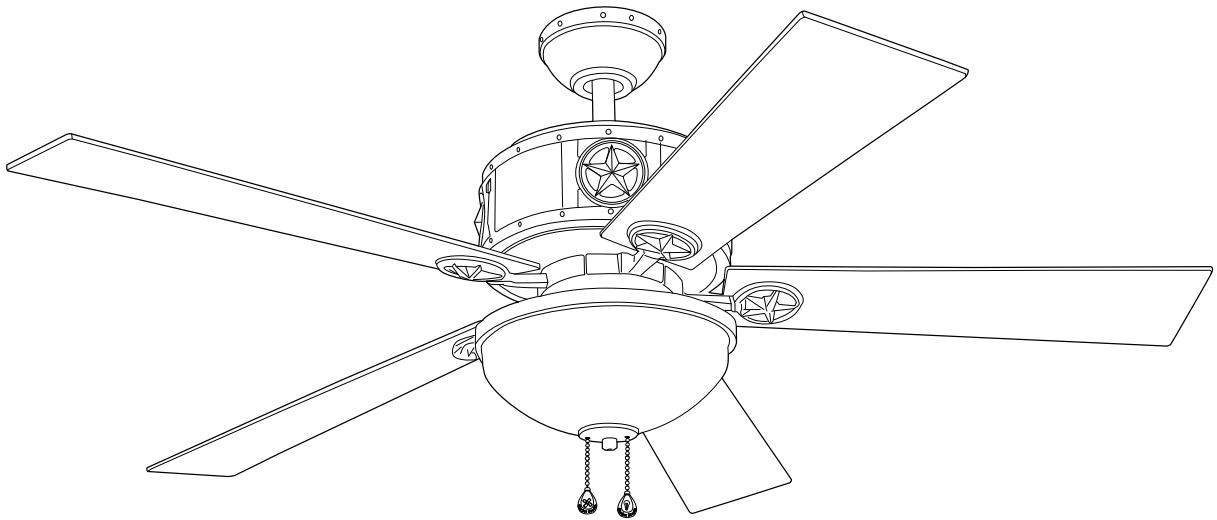

LISTED
E192641

ATTACH YOUR RECEIPT HERE

Serial Number _____ Purchase Date _____



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at **1-800-643-0067**, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

EB15437

Lowes.com/harborbreeze



TABLE OF CONTENTS

Safety Information	2
Package Contents	4
Hardware Contents	5
Preparation	5
Initial Installation	5
Fan Mounting	7
Wiring	9
Final Installation	11
Installing Fan With Light Kit	13
Installing Fan Without Light Kit	14
Operating Instructions	16
Care and Maintenance	18
Troubleshooting	19
Limited Lifetime Warranty	20
Replacement Parts List	21



SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS

- Do not discard fan carton or foam inserts. Should this fan need to be returned to the factory for repairs, it must be shipped in its original packaging to ensure proper protection against damage that might exceed the initial cause for return.
- Make sure all electrical connections comply with local codes, ordinances, the National Electrical Code and ANSI/NFPA 70-1999. Hire a qualified electrician or consult a do-it-yourself wiring handbook if you are unfamiliar with installing electrical wiring.
- Make sure the installation site you choose allows a minimum clearance of 7 ft. from the blades to the floor and at least 30 in. from the end of the blades to any obstruction.
- After you install the fan, make sure all connections are secure to prevent the fan from falling.
- The net weight of this fan including the light kit is: 22 lbs.



WARNING



To reduce the risk of fire, electrical shock or personal injury, mount fan to outlet box marked "ACCEPTABLE FOR FAN SUPPORT OF 35 LBS. OR LESS" and use mounting screws provided with the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and may need to be replaced. Consult a qualified electrician if in doubt.

When mounting fan to a ceiling outlet box, use a METAL octagonal outlet box; do NOT use a plastic outlet box. Secure the outlet box directly to the building structure. The outlet box and its support must be able to support the moving weight of the fan (at least 35 lbs.).

To avoid personal injury, the use of gloves may be necessary while handling fan parts with sharp edges.

To reduce the risk of fire, electrical shock or personal injury, wire connectors provided with this fan are designed to accept only one 12-gauge house wire and two lead wires from the fan. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the corresponding fan lead wires, consult an electrician for the proper size wire connectors to use.

To reduce the risk of fire or electrical shock, do not use the fan with any solid state speed control device or control fan speed with a full range dimmer switch.

To reduce the risk of fire, electrical shock or personal injury, do not bend the blade arms when installing them, balancing the blades or cleaning the fan. Do not insert objects between the rotating fan blades.

To reduce the risk of personal injury, use *only* parts provided with this fan. The use of parts *OTHER* than those provided with this fan will void the warranty.


Before proceeding, be sure to shut off electricity at main switch or circuit breaker in order to avoid electrical shock.

CAUTION

Be sure outlet box is properly grounded and that a ground wire (green or bare) is present.

Before beginning installation, carefully check all screws, bolts and nuts on fan motor assembly to ensure they are secure.

PACKAGE CONTENTS

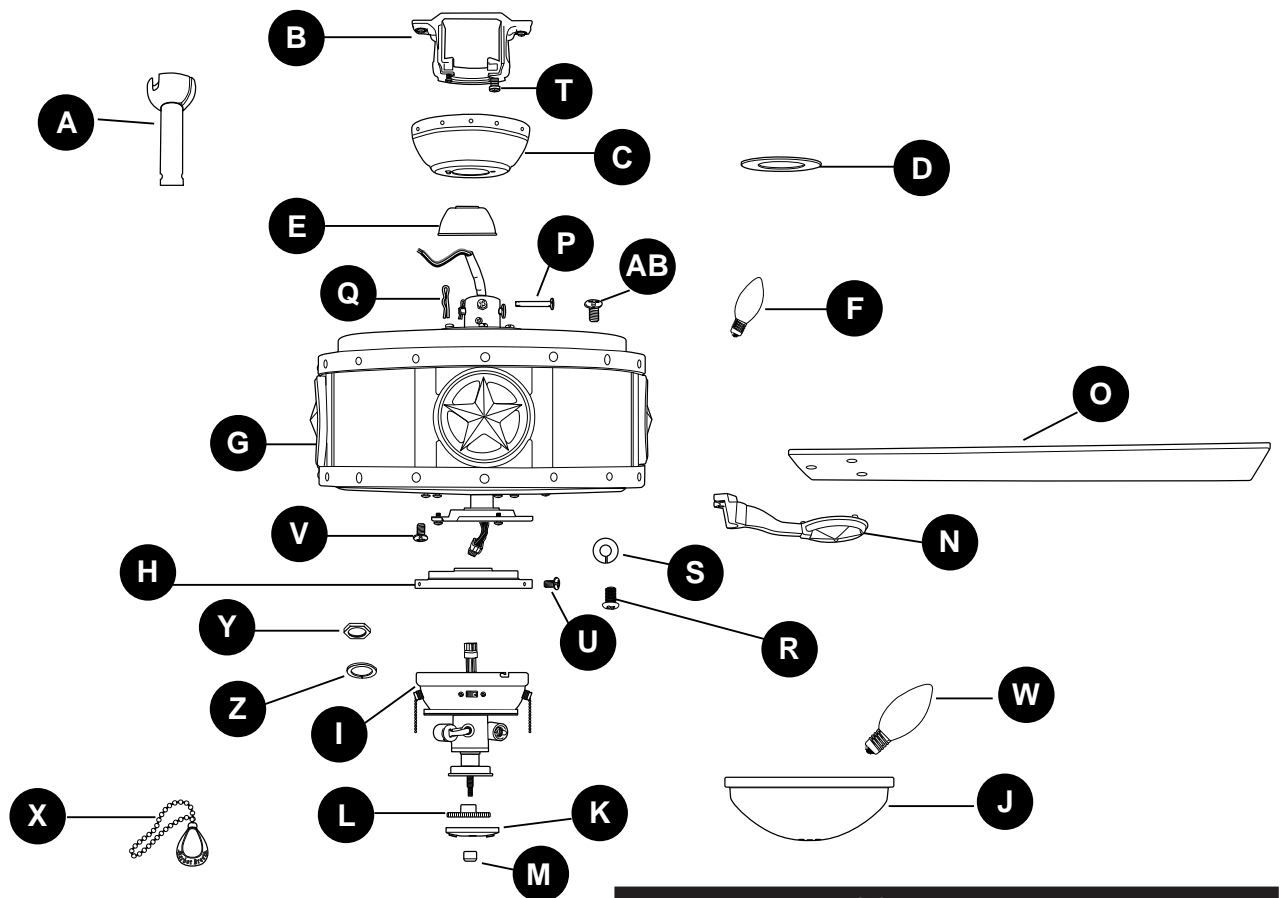


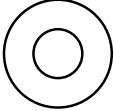
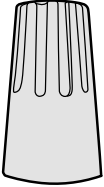

PART	DESCRIPTION	QUANTITY
A	Downrod	1
B	Mounting Bracket	1
C	Canopy	1
D	Canopy Cover	1
E	Yoke Cover	1
F	15-watt Bulb (preassembled)	4
G	Motor Housing	1
H	Switch Housing Plate	1
I	Light Kit Fitter	1
J	Glass Shade	1
K	Finial Plate (preassembled)	1
L	Threaded Washer (preassembled)	1
M	Finial (preassembled)	1
N	Blade Arm	5
O	Blade	5

	DESCRIPTION	QUANTITY
P	Pin (preassembled)	1
Q	Clip (preassembled)	1
R	Motor Screw (preassembled)	10 + 1 extra
S	Lock Washer (preassembled)	10 + 1 extra
T	Canopy Mounting Screw (preassembled)	2
U	Switch Housing Screw (preassembled)	3
V	Motor Plate Screw (preassembled)	3
W	60-watt Bulb	3
X	Pull Chain Extension	2
Y	Hex Nut (preassembled)	1
Z	10 mm Lock Washer (preassembled)	1
AB	Access Cover Screw (preassembled)	8

! IMPORTANT REMINDER: You must use the parts provided with this fan for proper installation and safety.



HARDWARE CONTENTS (shown actual size)

AA	BB	CC	DD
			
Blade Screw	Blade Washer	Wire Connector	Cap
Qty. 15 + 1 extra	Qty. 15 + 1 extra	Qty. 4	Qty. 1

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 120 minutes


Tools Required for Assembly (not included): Electrical Tape, Phillips Screwdriver, Pliers, Safety Glasses, Stepladder and Wire Strippers

Helpful Tools (not included): AC Tester Light, Tape Measure, Do-It-Yourself Wiring Handbook and Wire Cutters

INITIAL INSTALLATION

1. Turn off circuit breakers and wall switch to the fan supply line leads.

⚠ DANGER: Failure to disconnect power supply prior to installation may result in serious injury or death.

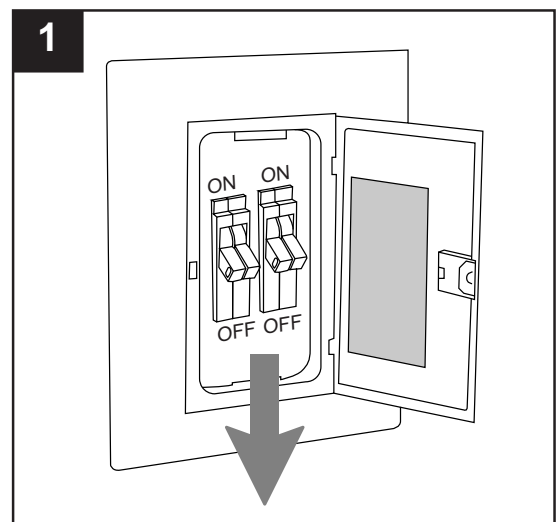

INITIAL INSTALLATION


2. Determine mounting method to use.

A. Standard mount


B. Angle mount

IMPORTANT: If using the angle mount, ensure the ceiling angle is not steeper than 19°.

***Helpful Hint:** Standard mounting is best suited for ceilings 8 ft. high or higher. For taller ceilings you may want to use a longer downrod (not included). Angle mounting is best suited for angled or vaulted ceilings. A longer downrod is sometimes necessary to ensure proper blade clearance.

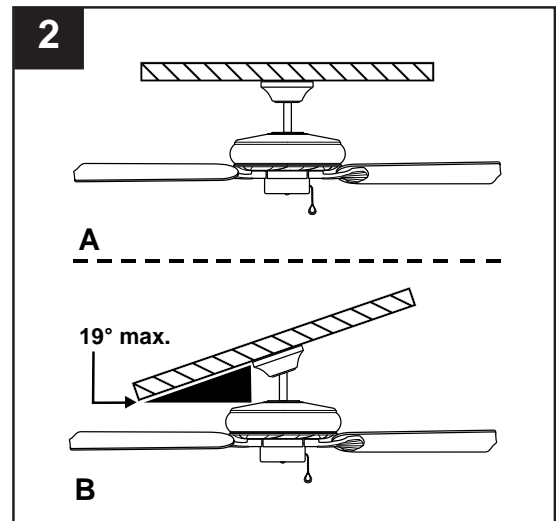


3. Check to make sure blades (O) will be at least 30 in. from any obstruction and at least 7 ft. above the floor.

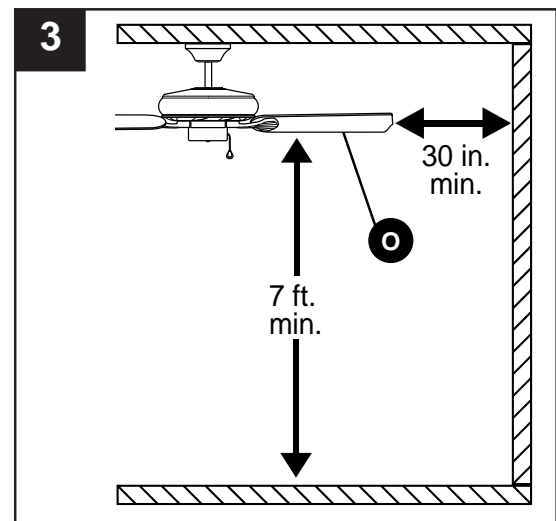

4. Secure mounting bracket (B) to outlet box (not included) using screws, spring washers and flat washers provided with the outlet box.


***NOTE:** It is very important you use the proper hardware when installing the mounting bracket (B) as this will support the fan.

IMPORTANT: If using the angle mount, make sure open end of mounting bracket (B) is installed facing the higher point of the ceiling.

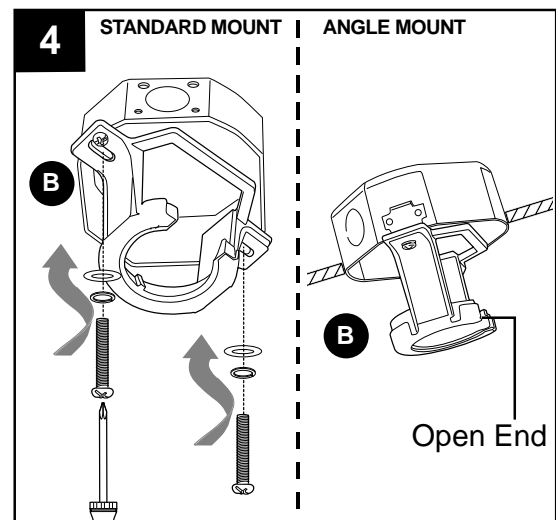



INITIAL INSTALLATION

5. Remove motor screws (R) and lock washers (S) from underside of motor housing (G) and save for later on. **Note:** If there are plastic motor blocks installed with the motor screws (R) and lock washers (S), discard the plastic motor blocks.

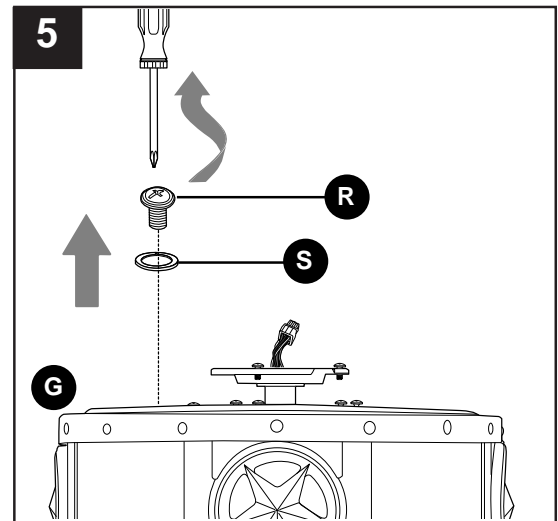


FAN MOUNTING

1. Remove pin (P) and clip (Q) from yoke at top of motor housing (G) and partially loosen preassembled set screws and nuts.
2. Insert downrod (A) through canopy (C), canopy cover (D) and yoke cover (E). Thread wires from motor housing (G) up through downrod (A). **NOTE:** Canopy cover (D) must be turned with the smooth side *toward* the motor housing (G).

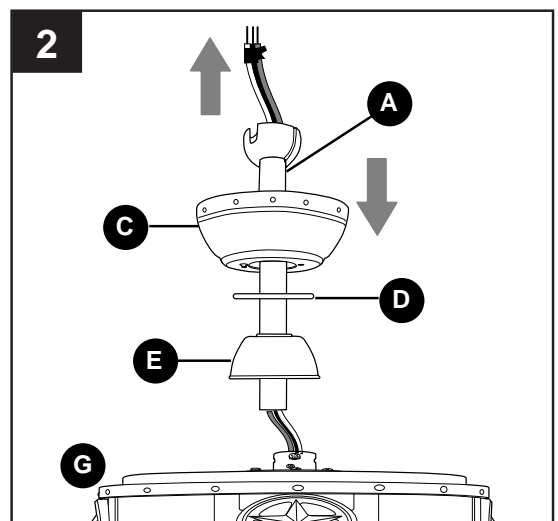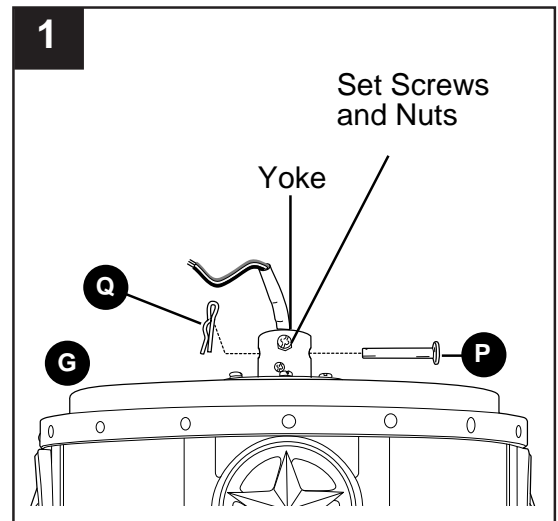

FAN MOUNTING


3. Slip downrod (A) into yoke, align holes and re-install pin (P) and clip (Q). Tighten set screws and then tighten nuts on the set screws. Slide yoke cover (E) down until it rests on top of motor housing (G).

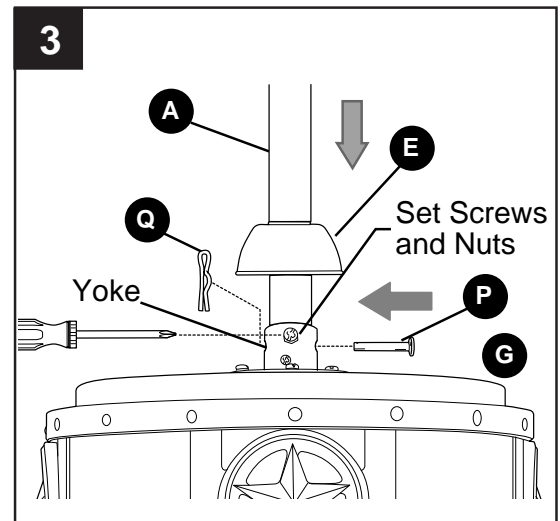


4. Depending on the length of downrod you use, you may need to cut the lead wires back to simplify the wiring. If you decide to cut back the lead wires, it is suggested you do so in the following manner:

Take the lead wires and make sure you have pulled them all the way through the top of the downrod. Start at the TOP of the ball on the downrod and measure 8 in. of lead wire, and then cut the excess wire off with wire cutters (not included).

NOTE: If you do *not* cut back the lead wires, **Steps 4 and 5 are not necessary and you may proceed to Step 6 instead.**

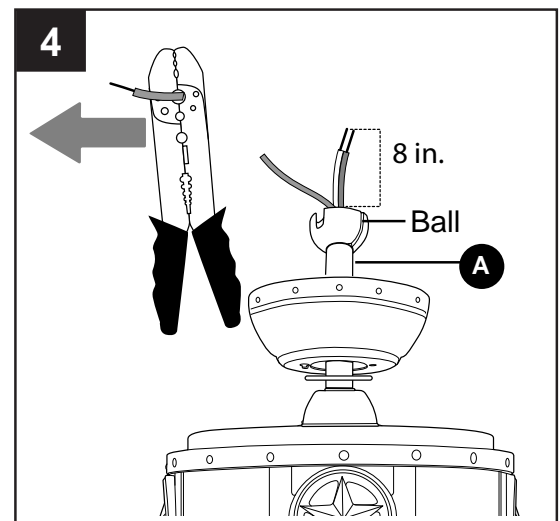


5. If you decided to cut back the lead wires in Step 4, strip a 1/2 in. of insulation from end of WHITE wire. Twist stripped ends of each strand of wire within the insulation with pliers (not included). Repeat Step 5 for BLACK, BLUE (if applicable) and GREEN wires.

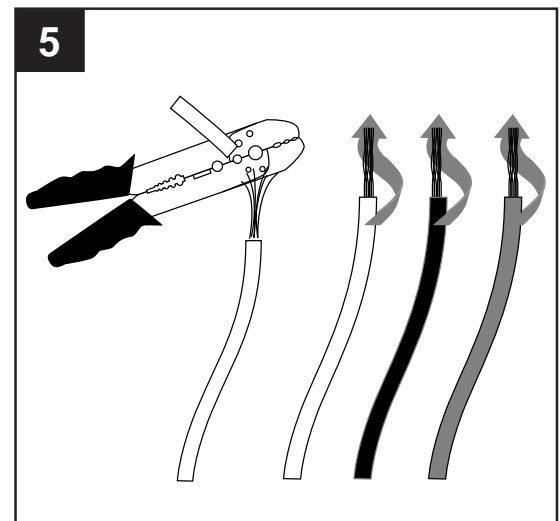

FAN MOUNTING

6. Install hanging ball of downrod (A) into opening of mounting bracket (B). Align the slot in hanging ball with the tab in mounting bracket (B).

⚠ DANGER: Failure to align slot in hanging ball with the tab in mounting bracket (B) may result in serious injury or death.

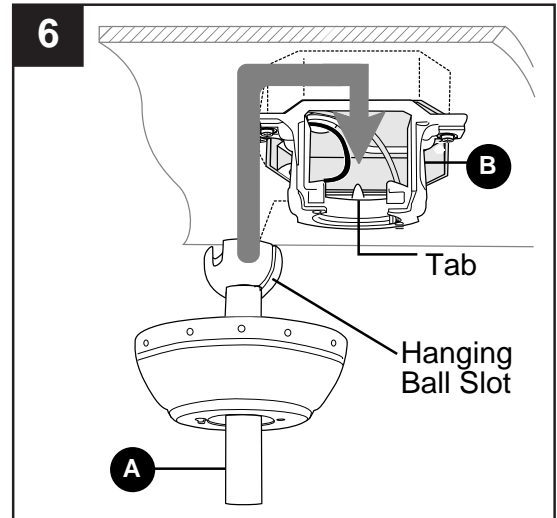

WIRING

⚠ WARNING: To reduce the risk of fire, electrical shock or personal injury, wire connectors provided with this fan are designed to accept only one 12-gauge house wire and two lead wires from the fan. If your house wire is larger than 12-gauge or there is more than one house wire to connect to the two fan lead wires, consult an electrician for the proper size wire connectors to use.


⚠ CAUTION: Be sure outlet box is properly grounded and a ground (green or bare) wire is present.

⚠ WARNING: If house wires are different colors than referred to in the following steps, stop immediately. A professional electrician is recommended to determine wiring.

NOTE: This fan is remote control adaptable (remote control not included). Please refer to instructions provided with the remote control before proceeding with these wiring instructions.


1. Choose wiring diagram (Fig. 1a, Fig. 1b or Fig. 1c) that fits your situation and make appropriate wiring connections as follows: **[IMPORTANT:** For each wire connection below, use one of the wire connectors (CC), making sure to screw wire connector (CC) on in a clockwise direction.]

1a. FAN AND LIGHT CONTROLLED BY PULL CHAINS: Connect BLACK and BLUE wire from fan to BLACK wire from ceiling. Connect WHITE wire from fan to WHITE wire from ceiling. Connect all GROUND (GREEN) wires together from fan (on downrod (A) and mounting bracket (B)) to BARE/GREEN wire from ceiling.

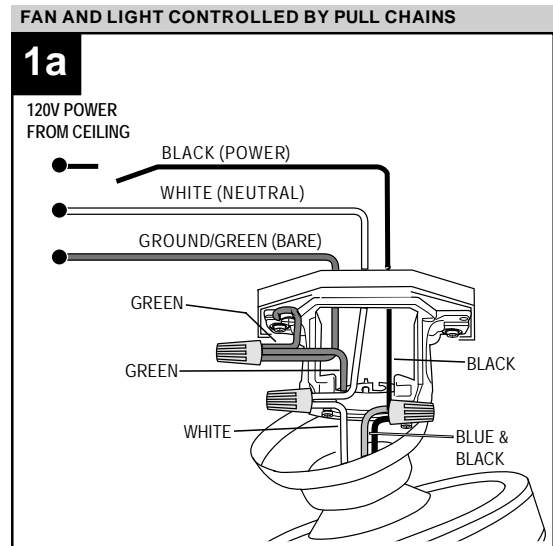


WIRING

1b. FAN CONTROLLED BY PULL CHAIN, LIGHT BY WALL SWITCH: If you intend to control the fan light with a separate wall switch, connect BLACK wire from fan to BLACK wire from ceiling. Connect BLUE wire from fan to the BLACK wire from the independent wall switch for the light. Connect WHITE wire from fan to WHITE wire from ceiling. Connect all GROUND (GREEN) wires together from fan (on downrod (A) and mounting bracket (B)) to BARE/GREEN wire from ceiling.

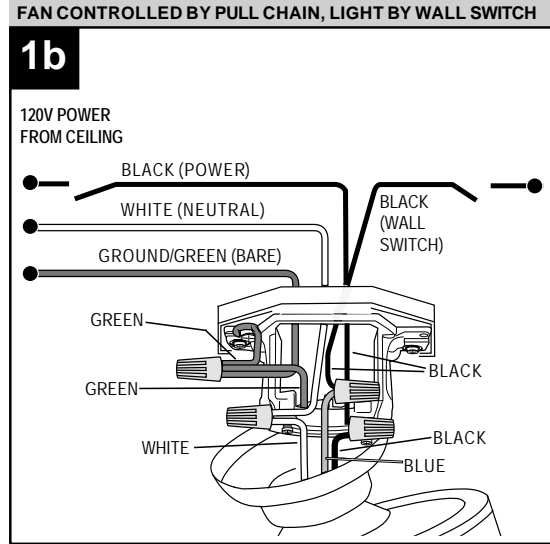

1c. FAN AND LIGHT CONTROLLED BY TWO WALL SWITCHES: If you intend to control the fan and light with separate wall switches, connect BLACK wire from fan to BLACK wire from the independent wall switch for the fan. Connect BLUE wire from fan to the BLACK wire from the other independent wall switch for the light. Connect WHITE wire from fan to WHITE wire from ceiling. Connect all GROUND (GREEN) wires together from fan (on downrod (A) and mounting bracket (B)) to BARE/GREEN wire from ceiling.

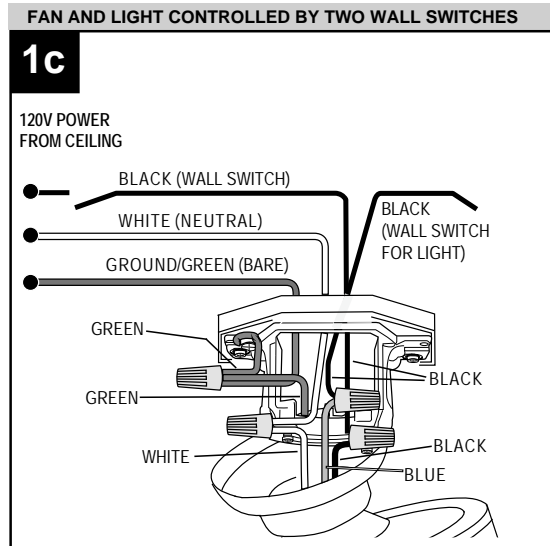


NOTE: BLACK wire is hot power for fan. BLUE wire is hot power for light kit. WHITE wire is common for fan and light kit. BARE/GREEN wire is ground.

2. Wrap electrical tape (not included) around each individual wire connector (CC) down to the wire.

⚠ WARNING: Make sure no bare wire or wire strands are visible after making connections. Place GREEN and WHITE connections on opposite side of box from the BLACK and BLUE (if applicable) connections.


Turn spliced/taped wires upward and gently push wires and wire connectors (CC) into outlet box.

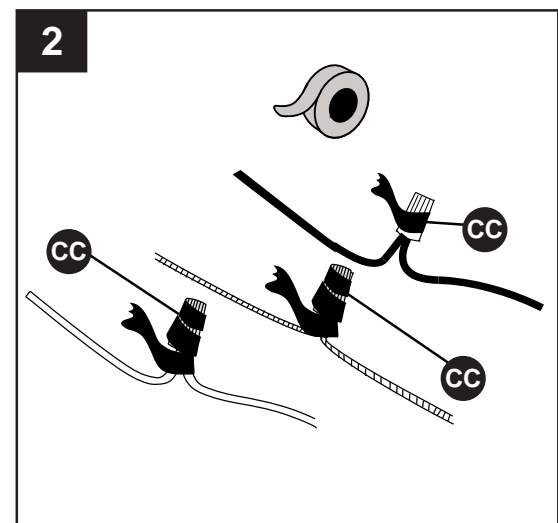

Hardware Used



Wire Connector




x 4



WIRING



- IMPORTANT:** Using a full range dimmer switch (not included) to control fan speed will cause a loud humming noise from fan. To reduce the risk of fire or electrical shock, do NOT use a full range dimmer switch to control fan speed.


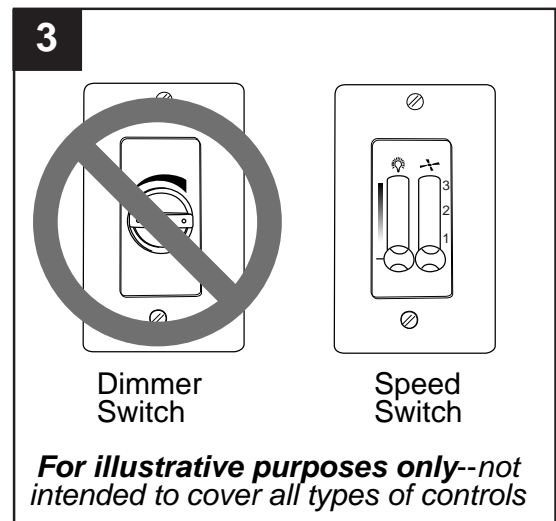


FINAL INSTALLATION

- Locate two canopy mounting screws (T) on underside of mounting bracket (B) and remove canopy mounting screw (T) closest to the open end of the mounting bracket (B). Partially loosen the other canopy mounting screw (T). Lift canopy (C) to mounting bracket (B). Place rounded part of slotted hole in canopy (C) over loosened canopy mounting screw (T) and push up. Twist canopy (C) to lock. Re-insert canopy mounting screw (T) that was removed, and then tighten both canopy mounting screws (T). Slide canopy cover (D) up to canopy (C), aligning rounded part of slotted holes in canopy cover (D) with screwheads in bottom of canopy (C). Turn canopy cover (D) clockwise until it stops.
- Partially insert three blade screws (AA) along with three blade washers (BB) to attach one blade arm (N) to a blade (O). Then, tighten each blade screw (AA) starting with the one in the middle. Repeat for remaining blades (O).


Hardware Used

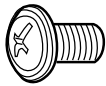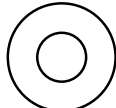AA Blade Screw		x 15
BB Blade Washer		x 15

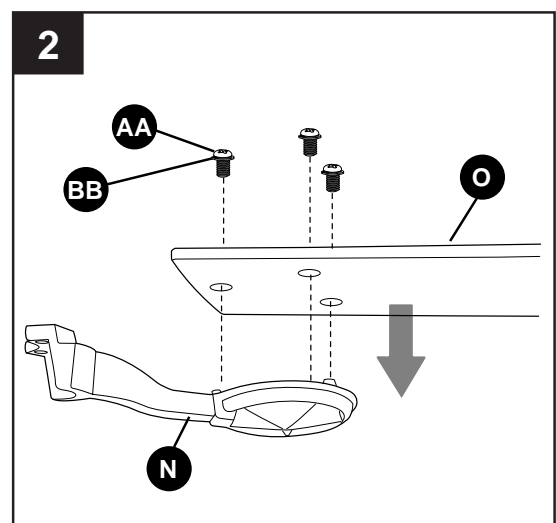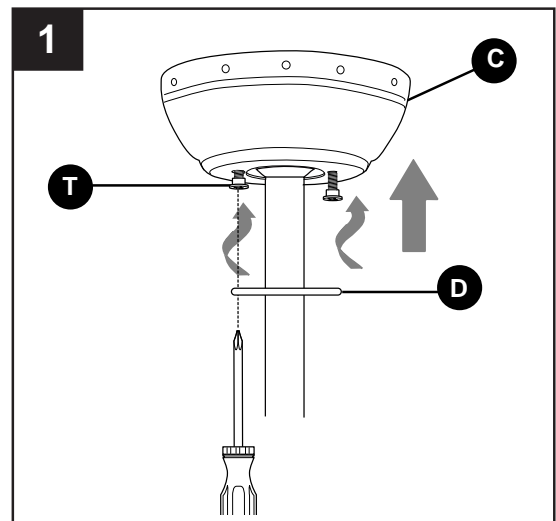


FINAL INSTALLATION


3. Insert two motor screws (R) along with lock washers (S) previously removed (Step 5, page 7) through one blade arm (N) and back into the holes on the underside of motor housing (G). Tighten motor screws (R) securely. Repeat with remaining blade arms (N), making sure to completely secure each blade arm (N) before proceeding with the next.

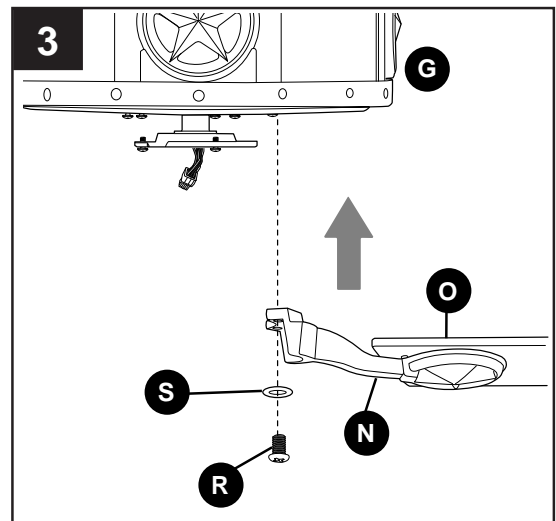

4. Partially loosen two switch housing screws (U) from outer edge of switch housing plate (H) and remove the other screw. Save for later use.

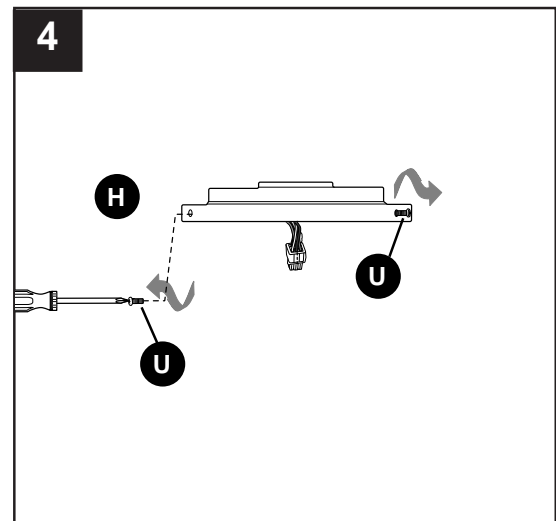

5. Partially loosen two motor plate screws (V) in motor plate on underside of motor housing (G) and remove the other screw. Align slotted holes in switch housing plate (H) with loosened motor plate screws (V), allowing male plug from motor housing (G) to come through hole in switch housing plate (H). Twist switch housing plate (H) to lock. Re-insert the motor plate screw (V) that was removed and securely tighten all three motor plate screws (V).

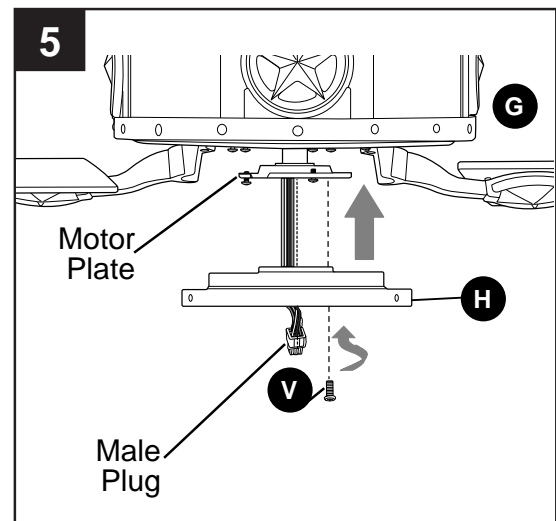


To install the fan with the light kit, proceed to **INSTALLING FAN WITH LIGHT KIT** on next page.
To install the fan without the light kit, skip to **INSTALLING FAN WITHOUT LIGHT KIT** on page 14.


INSTALLING FAN WITH LIGHT KIT

1. If you wish to use the fan WITH the light kit, connect male plug from motor housing (G) to female plug from switch housing on top of light kit fitter (I), matching up the colors on the male plug with the colors on the female plug for a proper fit. Make sure plugs are connected completely.

Align slotted holes in switch housing at top of light kit fitter (I) with loosened screws in switch housing plate (H). Twist light kit fitter (I) to lock, then re-install the switch housing screw (U) previously removed (Step 4, page 12). Tighten all switch housing screws (U) securely.

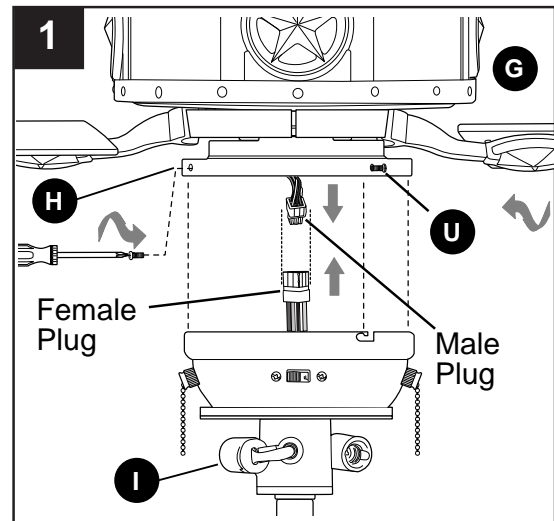


2. Remove finial (M), finial plate (K) and threaded washer (L) from threaded rod of light kit fitter (I) and save for later use.

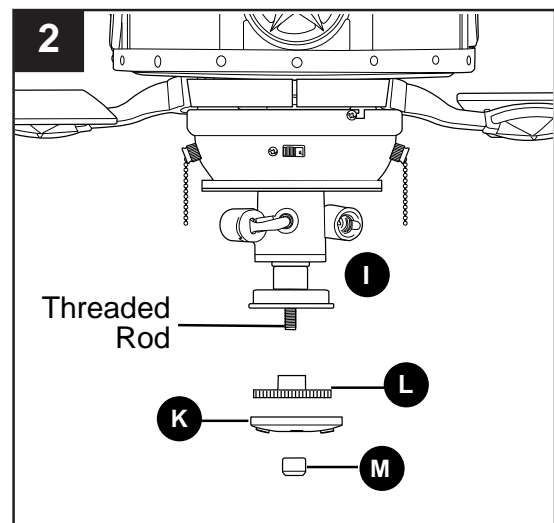

3. Install 60-watt bulbs (W) into sockets on light kit fitter (I).

⚠ WARNING: When replacing bulbs, allow bulbs and glass shade to cool down before touching.

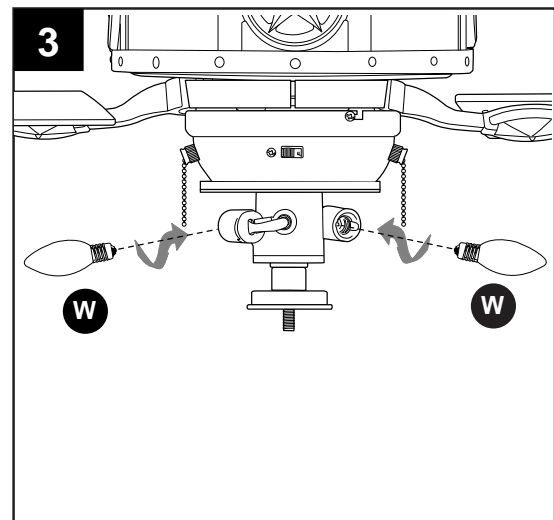

INSTALLING FAN WITH LIGHT KIT

4. Allow preassembled pull chains to come through light kit fitter (I) slots. Then, align center hole in glass shade (J) with threaded rod, allowing pull chains to come through corresponding holes in glass shade (J). Push up gently on glass shade (J) until threaded rod comes through hole. Secure glass shade (J) with threaded washer (L).



⚠ CAUTION: Do NOT overtighten threaded washer (L) as glass may crack or break.

Thread pull chains through appropriate holes in finial plate (K) and push up on finial plate (K), allowing threaded rod to come through hole in middle of finial plate (K). Secure with previously removed finial (M).

⚠ CAUTION: Do NOT overtighten finial (M) as glass may crack or break.

5. Attach pull chain extensions (X) or custom pull chain extensions (not included) to fan and light pull chains.


Assembly is now complete.

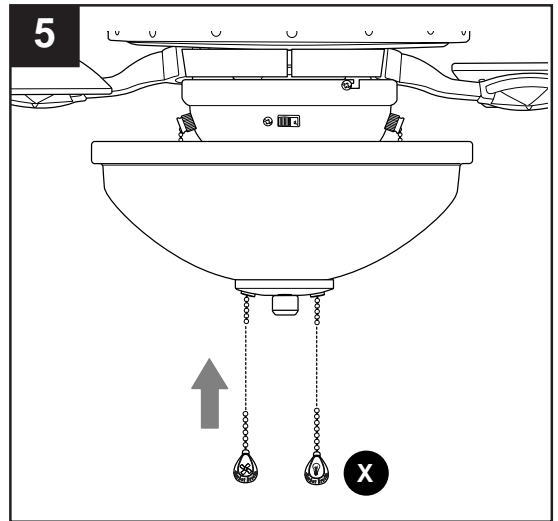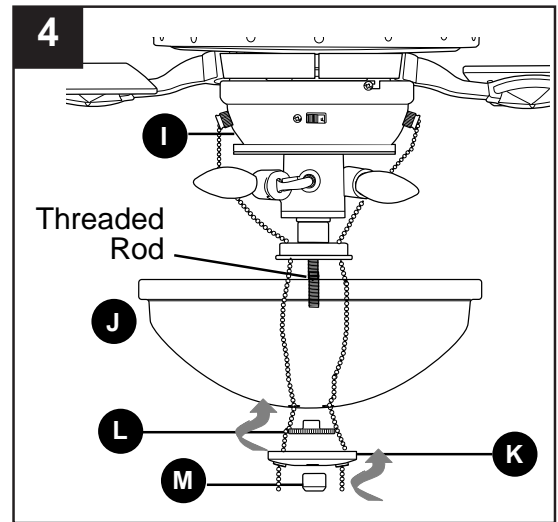

INSTALLING FAN WITHOUT LIGHT KIT

1. **If you do NOT wish to use the light kit**, locate wires in switch housing at top of light kit fitter (I) labeled FOR LIGHT and gently pull moxex connections apart in order to disconnect these wires.

Remove the hex nut (Y) and 10 mm lock washer (Z) from the threaded rod at the top of the light kit fitter (I). Unscrew the switch housing to remove it from the light kit fitter (I).

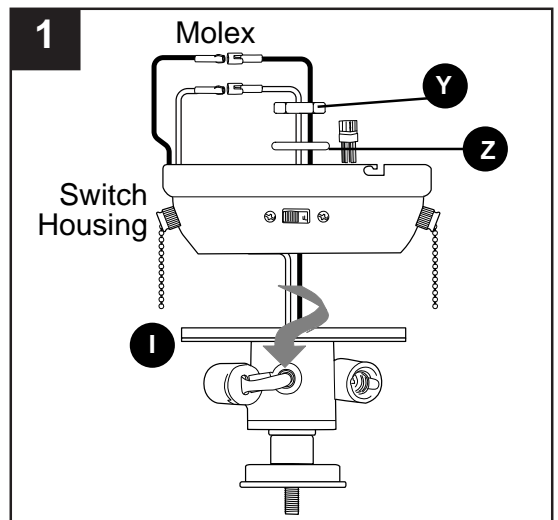


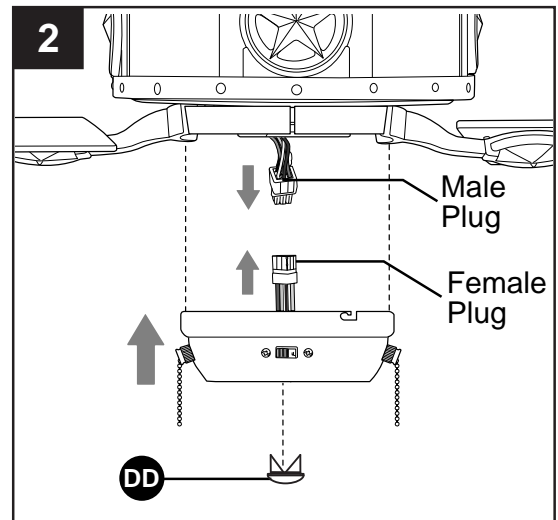
INSTALLING FAN WITHOUT LIGHT KIT

2. Firmly place cap (DD) in hole in middle of switch housing.


Connect male plug from motor housing (G) to female plug from the switch housing, matching up the colors on the male plug with the colors on the female plug for a proper fit. Make sure plugs are connected completely.

Hardware Used

DD	Cap		x 1
-----------	-----	---	-----




3. Align slotted holes in switch housing with loosened switch housing screws (U) in switch housing plate (H). Twist switch housing to lock, then re-install the switch housing screw (U) previously removed (Step 4, page 12). Tighten all switch housing screws (U) securely.

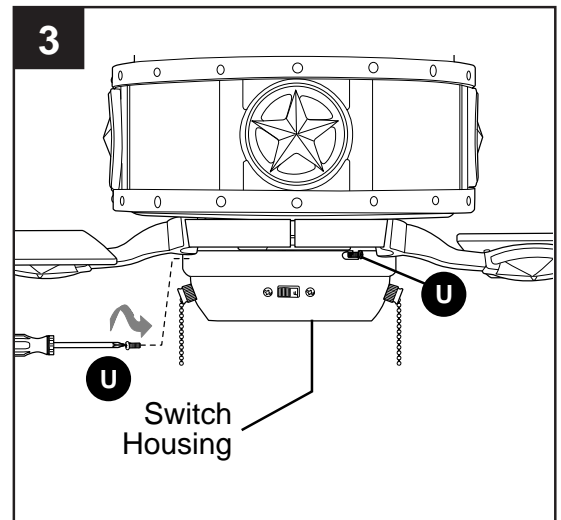


4. Attach pull chain extension (X) or custom pull chain extension (not included) to fan pull chain.

Assembly is now complete.

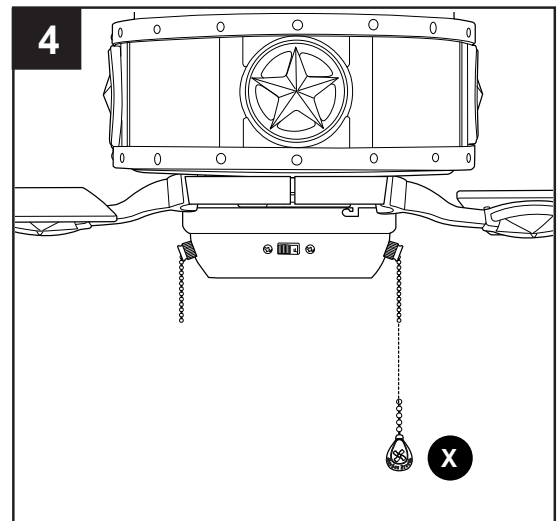


OPERATING INSTRUCTIONS

1. The pull chain located on the switch housing labeled **FOR FAN** has four positions to control **fan** speed. One pull is HIGH, two is MEDIUM, three is LOW and four turns the fan OFF.

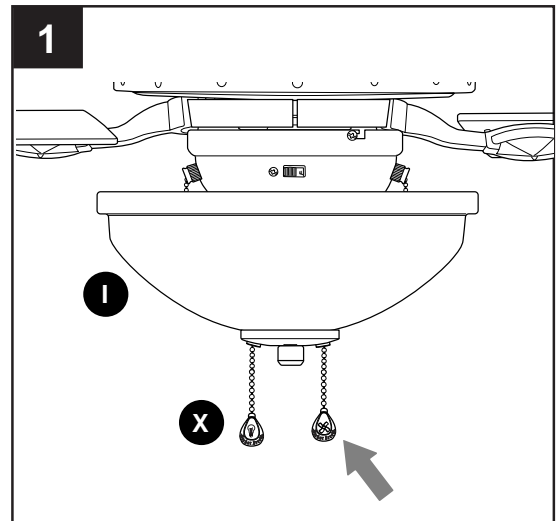


2. The pull chain located on the switch housing labeled **FOR LIGHT** has four positions to control **light** output. One pull turns the UPLIGHT ON, two pulls turns the UPLIGHT OFF and the DOWNLIGHT ON, three pulls turns ALL of the lights ON, and four pulls turns ALL of the lights OFF.

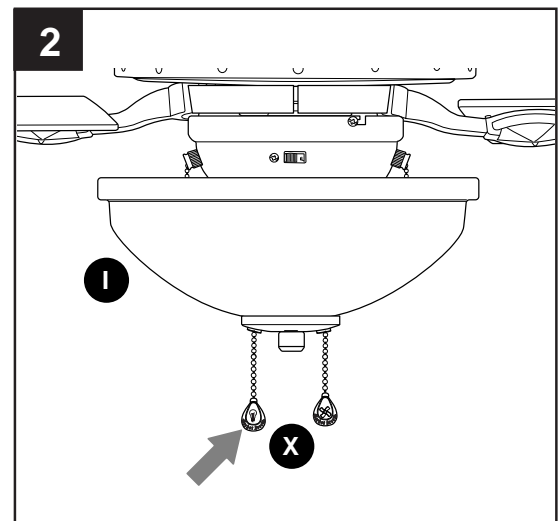

OPERATING INSTRUCTIONS


3. Use the fan reverse switch, located on the switch housing, to optimize your fan for seasonal performance. A ceiling fan will allow you to raise your thermostat setting in summer and lower your thermostat setting in winter without feeling a difference in your comfort.

NOTE: Wait for fan to stop before moving the reverse switch.

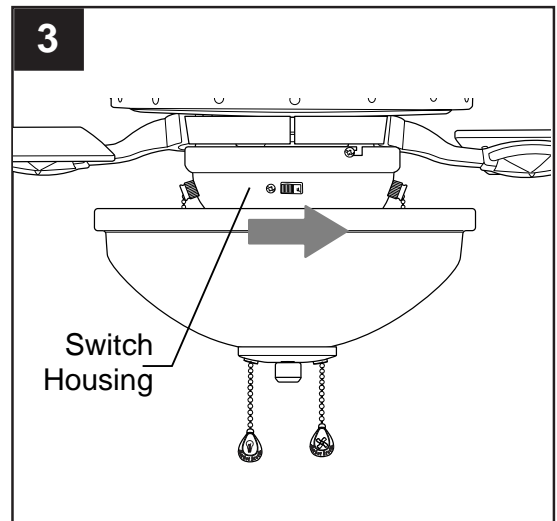


3A. In **warmer** weather, setting the reverse switch in the *LEFT* position will result in downward airflow, creating a wind chill effect.

3B. In **cooler** weather, setting the reverse switch in the *RIGHT* position will result in upward airflow that can help move stagnant, hot air off the ceiling area.

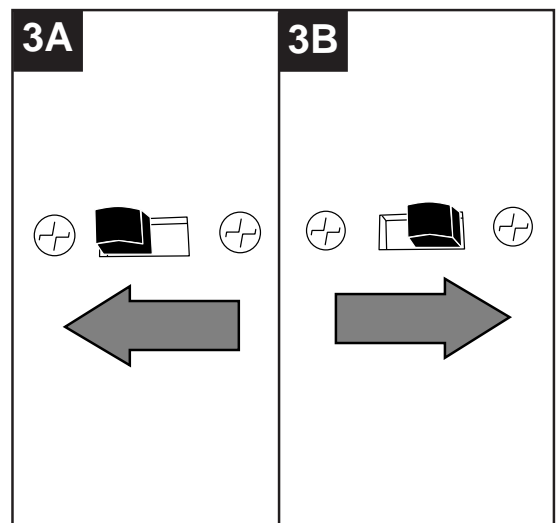

3C. **IMPORTANT:** Reverse switch must be set either **completely to the RIGHT** or **completely to the LEFT** for fan to function. If the reverse switch is set in the *middle* position, fan will not operate.

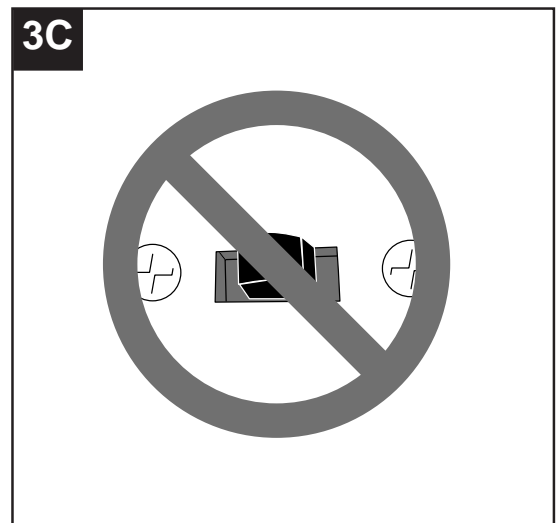

CARE AND MAINTENANCE


At least twice each year, lower canopy (C) to check mounting bracket (B), and then tighten all screws on fan. Clean fan with only a soft brush or lint-free cloth to avoid scratching the finish. Clean blades (O) with a lint-free cloth. You may occasionally apply a light coat of furniture polish to wood blades for added protection.

IMPORTANT: Shut off main power supply before beginning any maintenance. Do not use water or a damp cloth to clean the ceiling fan.

Bulb Replacement: Downlight - Use 60-watt max. candelabra-base incandescent bulbs, 13-watt candelabra-base CFLs or 6-watt candelabra-base LEDs.

Uplight - Use only 15-watt max. candelabra-base incandescent bulbs. CFLs and LEDs are not recommended.

When replacing 15-watt bulbs (F), locate access covers on the *top* of the motor housing (G). Determine which access cover contains the burned out 15-watt bulb (F). Remove the access cover by removing the two access cover screws (AB) at either end of the access cover. After replacing bulb(s), re-install access cover screws (AB) and tighten securely.

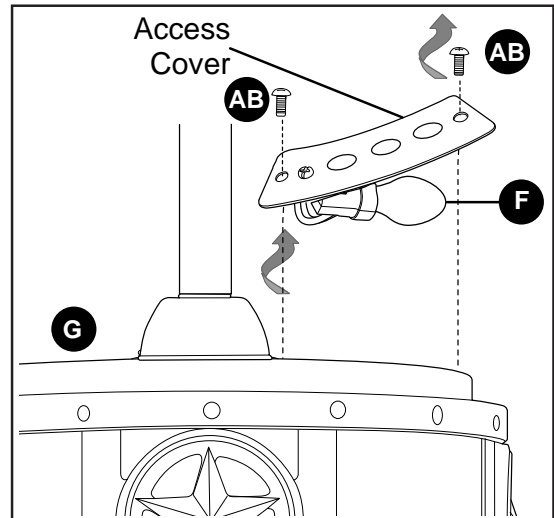

TROUBLESHOOTING

⚠ WARNING: Before beginning work, shut off the power supply to avoid electrical shock.

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Fan does not move.	<ol style="list-style-type: none"> 1. Reverse switch not engaged. 2. Power is off or fuse is blown. 3. Faulty wire connection. 4. Plugs not connected properly. 	<ol style="list-style-type: none"> 1. Push switch firmly either left or right. 2. Turn power on or check fuse. 3. Turn power off. Loosen canopy and check all connections. 4. Check male and female plugs in switch housing are connected properly according to instructions on page 13.
Noisy operation.	<ol style="list-style-type: none"> 1. Blades are loose. 2. Cracked blade. 3. Full range dimmer switch. 4. Fan is new. 	<ol style="list-style-type: none"> 1. Tighten all blade screws. 2. Replace blade. 3. Replace with an approved speed control device. 4. Allow fan a "break in" period of a few days, especially when running the fan at Medium and High speeds.
Excessive wobbling.	<ol style="list-style-type: none"> 1. Blades are loose. 2. Blade arms incorrectly attached. 3. Fan not securely mounted. 4. Fan too close to vaulted ceiling. 5. Set screw(s) on motor housing yoke is (are) not tightened properly. 6. Set screw on hanging ball is not tightened properly. 	<ol style="list-style-type: none"> 1. Tighten all blade screws. 2. Re-install blade arms. 3. Turn power off. Carefully loosen canopy and verify that mounting bracket is secure. 4. Use a longer downrod or move fan to another location. 5. Tighten yoke set screw(s) securely. 6. Carefully loosen and lower canopy and verify set screw on hanging ball is tightened securely.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Fan operates but light fails.	<ol style="list-style-type: none"> 1. Wires in canopy not wired properly. 2. Wall switch to fan is off. 3. Plugs not connected properly. 4. Light kit is lamped with more than the allowable 190W, causing the wattage limiting device to interrupt the flow of electricity to the light kit. 	<ol style="list-style-type: none"> 1. Check wires in canopy and, if necessary, re-wire according to instructions on pages 9 and 10. 2. Make sure that wall switch to fan is on. 3. Check that male and female plugs in switch housing are connected properly according to instructions on page 13. 4. Lamp light kit with bulbs that total no more than 190W.

Note: A small amount of "wobble" is normal and should not be considered a defect.

LIMITED LIFETIME WARRANTY

The distributor warrants this fan to be free from defects in workmanship and materials present at time of shipment from the factory for Lifetime limited from the date of purchase. This warranty applies only to the original purchaser. The distributor agrees to correct any defect at no charge or, at our option, replace the ceiling fan with a comparable or superior model.

To obtain warranty service, present a copy of your sales receipt as proof of purchase. All cost of removal and reinstallation are the express responsibility of the purchaser. Any damage to the ceiling fan by accident, misuse or improper installation, or by using parts not produced by the manufacturer of this fan or affixing accessories not produced by the manufacturer of this fan, are the purchaser's own responsibility. The distributor assumes no responsibility whatsoever for fan installation during the limited lifetime warranty. Any service performed by an unauthorized person will render the warranty invalid.

Due to varying climatic conditions, this warranty does not cover changes in brass finish, rusting, pitting, tarnishing, corroding or peeling. Brass finish fans maintain their beauty when protected from varying weather conditions. Any glass provided with this fan is not covered by the warranty.

Any replacement of defective parts for the ceiling fan must be reported within the first year from the date of purchase. For the balance of the warranty, call our customer service department (at **1-800-643-0067**) for return authorization and shipping instructions so that we may repair or replace the ceiling fan. Any fan or parts returned improperly packaged is/are the sole responsibility of the purchaser. There is no further express warranty. The distributor disclaims any and all implied warranties. The duration of any implied warranty which cannot be disclaimed is limited to the limited lifetime period as specified in our warranty. The distributor shall not be liable for incidental, consequential or special damages arising at or in connection with product use or performance except as may otherwise be accorded by law. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty supersedes all prior warranties.




REPLACEMENT PARTS LIST


For replacement parts, call our customer service department at **1-800-643-0067**, 8 a.m. - 6 p.m., EST, Monday - Thursday, 8 a.m. - 5 p.m., EST, Friday.

PART	DESCRIPTION	PART #
A	Downrod	747609-A
B	Mounting Bracket	747609-B
C	Canopy	747609-C
H	Switch Housing Plate	747609-H
I	Light Kit Fitter	747609-I
N	Blade Arm	747609-N
O	Blade	747609-O


A




B




C



H




I

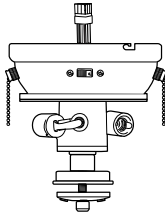

N



O

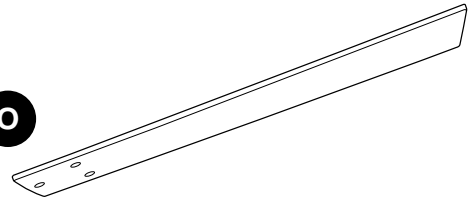

Printed in China

Harbor Breeze® is a registered trademark of LF, LLC. All Rights Reserved.



Lowes.com/harborbreeze